


TERMINALS OF ECU

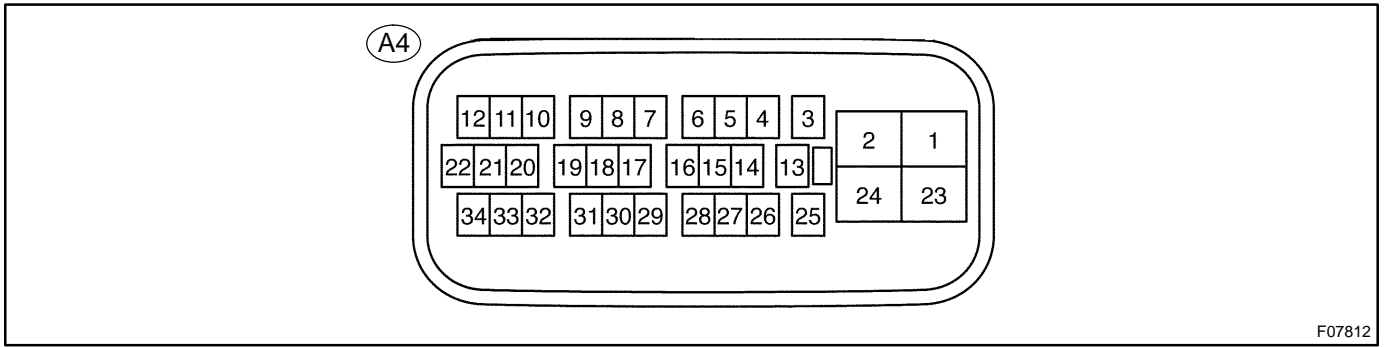

F07812

Symbols (A4 - Terminals No.)	Wiring Color	Condition	STD Voltage (A4 - V)
IG (A4 - 3) - GND (A4 - 1, 23)	B-L ↔ BR, W-B	IG switch ON	10 - 14
+BS (A4 - 2) - GND (A4 - 1, 23)	B ↔ BR, W-B	Always	10 - 14
RR+ (A4 - 5) - RR- (A4 - 4)	L ↔ R	IG switch ON Slowly turn right rear wheel	AC generation
RL+ (A4 - 7) - RL- (A4 - 6)	L ↔ P	IG switch ON Slowly turn left rear wheel	AC generation
Tc (A4 - 8) - GND (A4 - 1, 23)	P-B ↔ BR, W-B	IG switch ON	10 - 14
FL+ (A4 - 13) - FL- (A4 - 26)	R ↔ G	IG switch ON Slowly turn left front wheel	AC generation
STP (A4 - 16) - GND (A4 - 1, 23)	G-W ↔ BR, W-B	Stop light switch ON	10 - 14
		Stop light switch OFF	Below 1.0
+BM (A4 - 24) - GND (A4 - 1, 23)	B ↔ BR, W-B	Always	10 - 14
FR+ (A4 - 27) - FR- (A4 - 28)	B ↔ W	IG switch ON Slowly turn right front wheel	Below 1.0
WA (A4 - 30) - GND (A4 - 1, 23)	P ↔ BR, W-B	IG switch ON, ABS warning light ON	7 - 10
		IG switch ON, ABS warning light OFF	Below 2.0