


REMOVAL

1. REMOVE NO.2 CYLINDER HEAD COVER
2. REMOVE CYLINDER HEAD COVER (See page [EM-28](#))

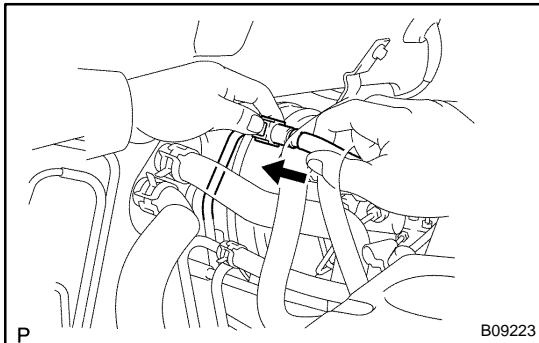


3. DISCONNECT FUEL TUBE

- (a) Remove the fuel pipe clamp.
- (b) Disconnect the fuel tube (fuel tube connector) from the fuel pipe.

CAUTION:

- Perform disconnecting operations of the fuel tube connector (quick type) after observing the precautions.
- As there is retained pressure in the fuel pipe line, prevent it from splashing inside the engine compartment.

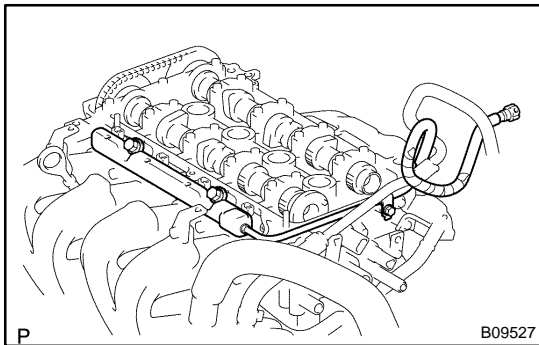

4. REMOVE DELIVERY PIPE AND INJECTORS

NOTICE:

Be careful not to drop the injectors when removing the delivery pipe.

- (a) Disconnect the 4 injector connectors from injector.
- (b) Remove the 3 bolts and delivery pipe together with the 4 injectors and fuel pipe.
- (c) Remove the 2 spacers from the cylinder head.
- (d) Pull out the 4 injectors from the delivery pipe.
- (e) Remove the O-rings and grommets from each injector.